


XTR2

GENERATORE

EN REMOVAL & REPLACEMENT

IT RIMOZIONE E SOSTITUZIONE

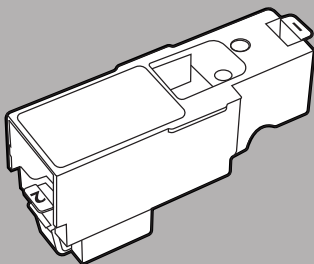

No Climb Products Ltd.
163 Dixons Hill Road, Welham Green.
Hertfordshire, AL9 7JE, United Kingdom
Tel +44 (0)1707 282 760

EU: shift-consult Hubert Scherzinger
Hessenweier 9,79108 Freiburg, DE
Tel: +49 (0) 7665 91 21 74

detectortesters.com

Note:

When replacing the generator, ensure that the unit is switched off before opening the back cover.

Nota:

Quando si sostituisce il generatore, assicurarsi che l'apparecchio sia spento prima di aprire il coperchio posteriore.



EN

REMOVAL

Remove the smoke cartridge from within the generator.

Disengage clip 1 and lift. Repeat for clip 2 to remove the used generator.

When replacing a generator, any dust or debris from the main unit can be removed with an air duster. Any condensation can be removed by wiping with a lint-free cloth.

REPLACEMENT

Insert the generator firmly into the recess, engaging clips 1 and 2.

Once the generator is inserted do not remove it until it is indicated that a replacement is necessary.

IT

RIMOZIONE

Rimuovere la cartuccia del fumo dall'interno del generatore.


Svincolare il fermaglio 1 e sollevare. Ripetere l'operazione per la clip 2 per rimuovere il generatore usato.

Quando si sostituisce un generatore, è possibile rimuovere polvere o detriti dall'apparecchio principale con uno spolverino. Eventuale condensa può essere rimossa asciugando delicatamente con un panno morbido privo di lanugine.

SOSTITUZIONE

Inserire saldamente il generatore nella cavità, agganciando le clip 1 e 2.

Una volta inserito il generatore non rimuoverlo finché non viene segnalato la necessità di sostituirlo.

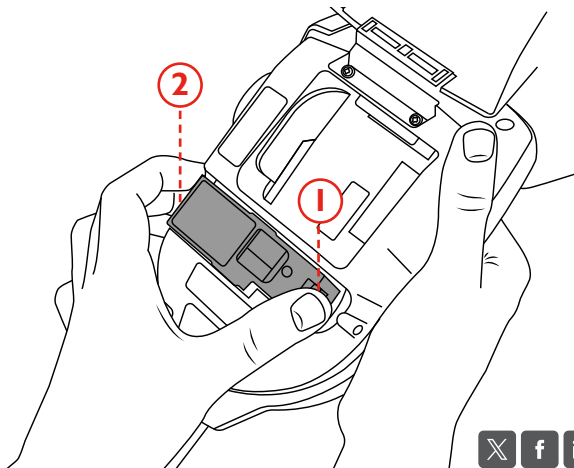

support@detectortesters.com

LIT1260-2